



RP700+
Interactive Flat Panel
User Manual



Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

Copyright

Copyright 2014 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Table of Contents

Safety warnings and precautions	1
Important safety instructions	2
Notes on the LCD panel of this display	2
Safety notice for remote control	3
Battery safety notice	3
BenQ ecoFACTS	4
Package contents	5
Setting up the display	6
Mounting the display	6
Parts of the display and their functions	9
Front/Rear panel	9
Input/output terminals	11
Remote control	13
Using the remote control	14
Connection	15
Connecting audio/video signals	15
Connecting the touch module	20
Connecting power	21
Using the touch screen	22
Important instructions for using the touch screen	26
Basic operations	27
Turning the display on or off	27
Switching input signals	28
Adjusting audio volume level	28
The OSD (On-Screen Display) menu	29
OSD menu overview	29
Operations in the OSD menu	30
Picture menu	31
Sound menu	32
Default menu	33
Clock menu	34
Multimedia OSD operation	35
Multimedia buttons on the remote control	35

Viewing files..... 36

Product information..... 41

 Specifications..... 41

 Dimensions..... 43

 Supported input signal resolution 44

Troubleshooting..... 46

Safety warnings and precautions



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

THIS EQUIPMENT MUST BE GROUNDED

To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.

- The mains plug of the power supply cord shall remain readily operable. The AC receptacle (mains socket outlet) shall be installed near the equipment and shall be easily accessible. To completely disconnect this equipment from the AC mains, disconnect the power cord plug from the AC receptacle.
- Do not place this display on an uneven, sloping or unstable surface (such as a trolley) where it may fall and cause damage to itself or others.
- Do not place this display near water, like a spa or pool, or in a position which will allow the splashing or spraying of water onto the display, like in front of an open window where rain water may enter.
- Do not install this display in a confined space without proper ventilation and air circulation, such as in a closed cabinet. Allow proper space around the display for dissipating heat inside. Do not block any openings and vents on the display. Overheating may result in hazards and electric shock.
- Installation of this display should only be performed by a qualified technician. Failure to install this display properly may cause injuries and damages to the personnels and the display itself. Check the installation regularly and maintain the display periodically to ensure the best working condition.
- Use only the accessories approved or recommended by the manufacturer to mount this display. Using wrong or unsuitable accessories may cause the display to fall and result in serious personal injuries. Make sure that the surface and fixing points are strong enough to sustain the weight of the display.
- To reduce the risk of electric shock, do not remove covers. No user serviceable parts inside. Refer servicing to qualified service personnel.
- To prevent personal injuries, mounting the display or installing desktop stands is required before use.

Important safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Notes on the LCD panel of this display

- The Liquid Crystal Display (LCD) panel of this display has a very thin protective layer of glass which is liable to marking or scratching, and cracking if struck or pressured. The liquid crystal substrate is also liable to damage under excessive force or extreme temperatures. Please handle with care.
- The response time and brightness of the LCD panel may vary with the ambient temperature.
- Avoid placing the display in direct sun or where direct sun or spot lighting will shine onto the LCD panel, as the heat may damage the panel and the external casing of the display, and the bright light will make viewing the display more difficult than necessary.
- The LCD panel consists of individual pixels to display images and is manufactured according to the design specifications. While 99.9% of these pixels work normally, 0.01% of the pixels may remain constantly lit (in red, blue or green) or unlit. This is a technical limitation of the LCD technology and is not a defect.
- LCD screens, like plasma (PDP) and conventional CRT (Cathode Ray Tube) screens, are also susceptible to 'screen burn-in' or 'image retention' which can be found on the

screen as visible fixed lines and shades. To avoid such damage to the screen, avoid displaying still images (like On-Screen Display menus, TV station logos, fixed/inactive text or icons) for more than two hours. Change the aspect ratio from time to time. Fill the entire screen with the image and eliminate the black bars whenever possible. Avoid displaying images in 4:3 aspect ratio over a long period of time, otherwise there may be visible burn marks on the screen as two vertical lines.

Note: Under certain circumstances, condensation may occur on the inner side of the cover glass, it's a natural phenomenon and will not affect the operation of the display. This condensation will usually disappear after around 2 hours of normal operation.

Safety notice for remote control

- Do not put the remote control in the direct heat, humidity, and avoid fire.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture. Failure to do so could result in malfunction.
- Confirm there is no object between the remote control and the remote sensor of the product.
- When the remote control will not be used for an extended period, remove the batteries.

Battery safety notice

The use of the wrong type of batteries may cause chemical leaks or explosion. Please note the following:

- Always ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life or cause chemical leaks from the old batteries.
- When batteries fail to function, replace them immediately.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth, and replace the batteries as soon as possible.
- Due to varying storage conditions, the battery life for the batteries included with your product may be shortened. Replace them within 3 months or as soon as you can after initial use.
- There may be local restrictions on the disposal or recycling of batteries. Consult your local regulations or waste disposal provider.

BenQ ecoFACTS

BenQ has been dedicated to the design and development of greener product as part of its aspiration to realize the ideal of the "Bringing Enjoyment 'N Quality to Life" corporate vision with the ultimate goal to achieve a low-carbon society. Besides meeting international regulatory requirement and standards pertaining to environmental management, BenQ has spared no efforts in pushing our initiatives further to incorporate life cycle design in the aspects of material selection, manufacturing, packaging, transportation, using and disposal of the products. BenQ ecoFACTS label lists key eco-friendly design highlights of each product, hoping to ensure that consumers make informed green choices at purchase. Check out BenQ's CSR Website at <http://csr.BenQ.com/> for more details on BenQ's environmental commitments and achievements.




Package contents


Open the sales package and check the contents. If any item is missing or damaged, please contact your dealer immediately.



LCD display




Power cord x4




D-Sub (15-pin)
cable x1




Audio cable x2




Pen tray



USB cable x1



AAA battery x 2



Touch pen x 2



Speaker cable x2



Remote control



Quick start guide



- The type of power cord supplied may differ from that illustrated depending on your region of purchase.
- Before discarding the package, check that you haven't left any accessories inside the box.
- Dispose of packaging materials wisely. You can recycle the cardboard carton. Consider storing the package (if possible) for future transport of the display.
- Do not leave plastic bags within reach of young children or babies.

Setting up the display

Mounting the display


You can install the display on a vertical surface with a suitable wall mounting bracket or on a horizontal surface with the optional desktop stands. Please pay attention to the following notes during installation:

- This display should be installed by at least two adult persons. Attempting to install this display by only one person may result in danger and injuries.
- Refer the installation to qualified technicians. Improper installation may cause the display to fall or malfunction.


Installing the display on a wall

1. Place a clean, dry and lint-free cloth on a flat, horizontal and object-free surface. Make sure that the size of the cloth is larger than the display.
2. Gently lay the display on the cloth with the LCD screen facing down.
3. Remove the desktop stands from the display if installed.

4. Identify the wall mounting screw holes on the back of the display as shown in the illustration.

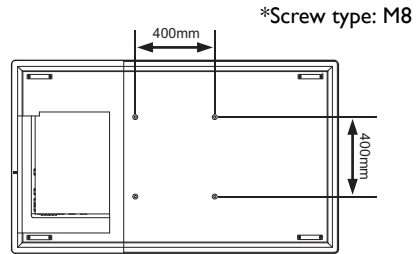


5. Install the wall mounting bracket on the display and attach the display to the wall according to the mounting bracket's instructions. The length of the screw should exceed the thickness of the wall mounting bracket by at least 10 mm. Make sure that all screws are tightened and secured properly. (Recommended torque: 470 - 635N•cm). The mounting means should be strong enough to bear the weight of the display.

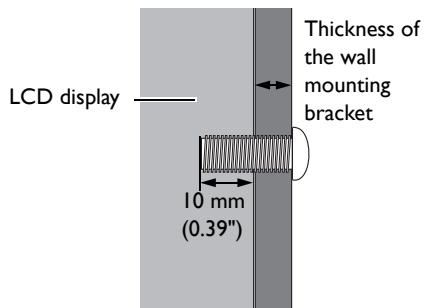




- To maintain proper ventilation, keep at least 10 mm of clear space from the back cover of the display to the wall.
- Please consult a professional technician for wall mount installations. The manufacturer accepts no liability for installations not performed by a professional technician.




- The AC IN/OUT socket should be on top of connectors when rotating your display.

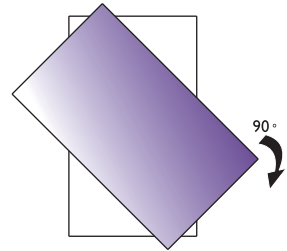


Installing the pen tray

1. Place a clean, dry and lint-free cloth on a flat, horizontal and object-free surface. Make sure that the size of the cloth is larger than the display.
2. Gently lay the display on the cloth with the LCD screen facing down.


3. Identify the wall mounting screw holes on the back of the display as shown in the illustration and remove the 3 screws on the display.

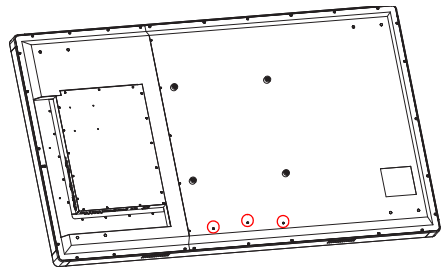

4. Place the pen tray on the back of the display as shown, and fasten the 3 screws back to the respective holes.

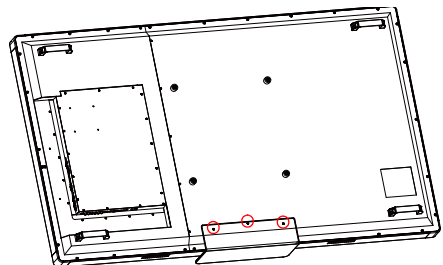


5. Lay the display straight and the pen tray is at the bottom edge of the display.

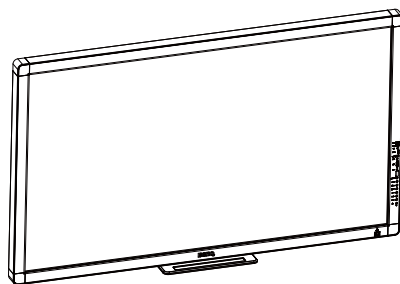

Parts of the display and their functions


Front/Rear panel

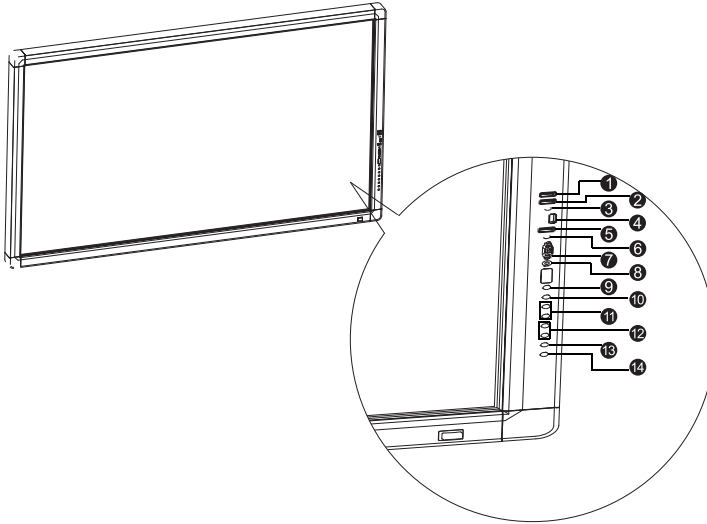

No.	Name	Description
1	PC USB	Connects to the extended USB port of computer from PC USB at back.
2	M USB	Accesses multimedia files on USB drives directly.
3	MIC	Connects to a microphone.
4	HDMI 3	Receives HDMI signals from an external device.
5	TOUCH 3	Connects the USB cable from the display to a computer to use the touch module.
6	AUDIO	Receives audio signals from an external device.
7	VGA 3	Receives analog RGB signals from an external device.
8	AV 2	Receives composite video signals from an external device.
9	INPUT/ENTER	• Selects/confirms options in On-Screen Display (OSD) menu. • Selects input sources.
10	MENU	Opens or closes the OSD menu. • Freezes/vacates the screen.
11	FREEZE ▲ /BLANK ▼	• Scrolls through settings and options in the OSD menu. • Freezes the image when the OSD menu is off/Hides the image (the screen becomes blank) when the OSD menu is off.
12	◀ /-, ▶ /+	• Scrolls through settings and options in the OSD menu. • ◀ /-, ▶ /+: Hot keys for audio volume adjustment.

13	MUTE	Turns off sound or restores.
14	 ON/OFF	Turns the display on or off.
		TOUCH 3 must be used with HDMI 3 or VGA 3.

Input/output terminals

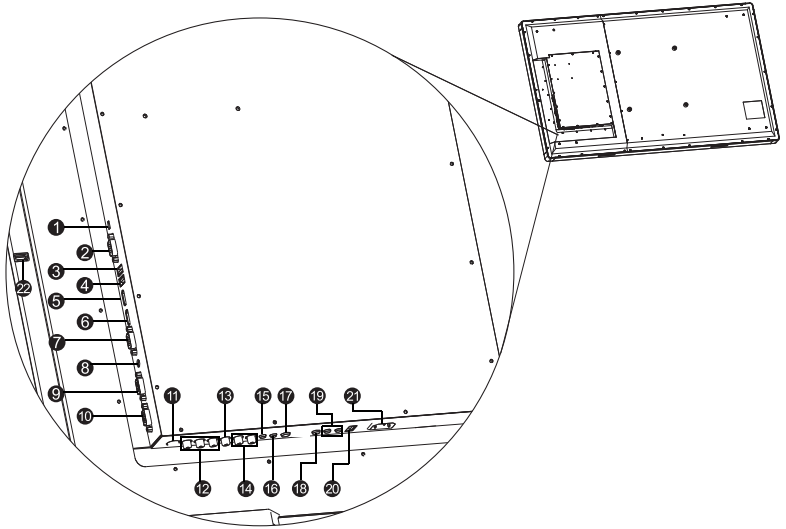


No.	Name	Description
①	PC SERVER PORT	Connects to the USB port of computer for service.
②	RS232	Receives control signals from a computer.
③	TOUCH 1	Connects the USB cable from the display to a computer to use the touch module.
④	TOUCH 2	Connects the USB cable from the display to a computer to use the touch module.
⑤	HDMI 1	Receives HDMI signals from an external device.
⑥	HDMI 2	Receives HDMI signals from an external device.
⑦	VGA 1	Receives analog RGB signals from an external device (such as a computer).
⑧	AUDIO	Receives audio signals from an external device.
⑨	VGA 2	Receives analog RGB signals from an external device (such as a computer).
⑩	VGA OUT	Outputs analog RGB signals from the VGA IN input to another display.
⑪	S-VIDEO	Receives S-Video signals from an external device (such as a VCR or DVD player).
⑫	YPbPr 1	Receives component video (YPbPr) signals from an external device (such as a DVD player, HDTV device or Laser disc player).
⑬	AV 1	Receives composite video signals from an external device (such as a VCR or DVD player).
⑭	L R	Receives audio signals from an external device that outputs video to YPbPr 1 or AV 1 .

15	YPbPr 2	Receives component video (YPbPr) signals from an external device via 3.5mm RGB component video cable.
16	AV OUT	Outputs composite video signals from the AV IN input to another display with a 3-in-1 3.5mm RCA cable.
17	SPDIF Out	Outputs digital audio signals via a coaxial cable to an external device.
18	Earphone	Connects to a headphone or an earphone.
19	Sound Box L R	Connects to external stereo speakers.
20	M USB	Accesses multimedia files on USB drives directly.
21	Power	Connects to a power outlet via the supplied power cord.
22	PC USB	Extends the USB port of computer to PC USB at front.



- TOUCH 1 must be used with HDMI 1 or VGA 1, and TOUCH 2 must be used with HDMI 2 or VGA 2.
- Either front or back **PC USB** has to be adopted for the other functioning as a USB extender.

Remote control

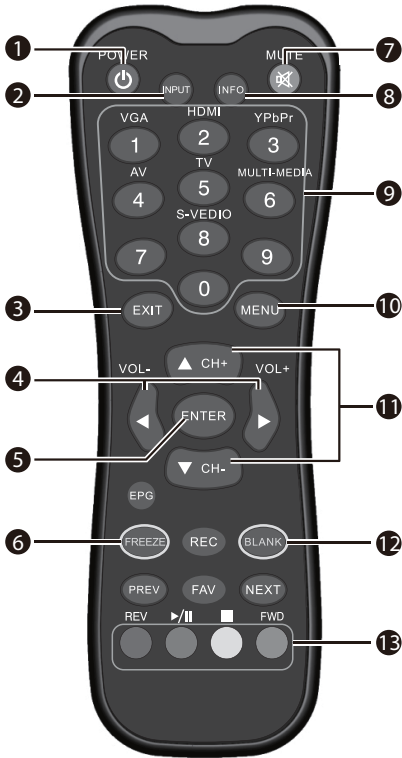

1 POWER

Turns the display on or off.

2 INPUT

Selects an input source.

3 EXIT

Returns to the previous menu or closes the OSD menu when the OSD menu is on.

4 ◀ / VOL- / ▶ / VOL+

- Scrolls through settings and options in the OSD menu.
- Turns down/up the volume.

5 ENTER

Confirms your selection or save changes.

6 FREEZE

Freezes the image when the OSD menu is off. Not applicable to files on USB drives.

7 MUTE

Turns on or off the mute function.

8 INFO

Shows the current input source and resolution.

9 Numeric buttons (0-9) /Input source buttons

- Performs as numeric buttons when the OSD menu is on.
- Performs as input source buttons when the OSD menu is off. To select an input source as printed on top of the button, press **INPUT** and press a desired source such as **VGA**, **HDMI**, and etc. 

10 MENU

Opens or closes the OSD menu.

11 ▲ CH+ / ▼ CH-

Scrolls through settings and options in the OSD menu when the OSD menu is on.

12 BLANK


Hides the image (the screen becomes blank) when the OSD menu is off. Press again to resume normal display.

13 MULTI-MEDIA buttons


See [Multimedia OSD operation on page 35](#) for details.

Using the remote control

Installing remote control batteries

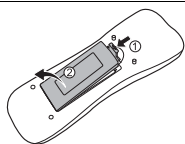


1. Open the remote control battery compartment cover.

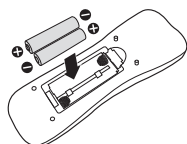

2. Insert the supplied batteries ensuring that the positive and negative marked battery terminals match the (+) and (-) marks in the battery compartment.




The supplied batteries are provided for your convenience so that you can operate the display straight away. You should replace them as soon as possible.

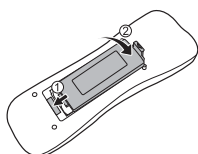

3. Refit the battery compartment cover.

Remote control usage tips

- Point and aim the top front of the remote control directly at the display's remote control sensor window when you press the buttons.
- Do not let the remote control become wet or place it in humid environments (like bathrooms).
- If the display's remote control sensor window is exposed to direct sunlight or strong light, the remote control may not operate properly. In this situation, change the light source, readjust the angle of the display or operate the remote control from a location closer to display's remote control sensor window.

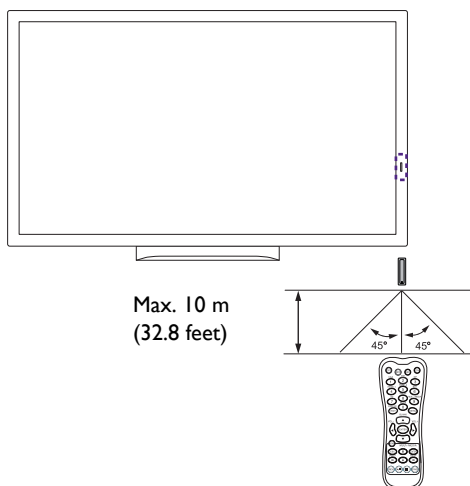

Connection


Connecting audio/video signals

Pay attention to the following notes when you connect cables:

- Please turn off all devices.
- Familiarize yourself with the audio/video ports on the display and the devices you want to use. Be aware that incorrect connections may adversely affect picture quality.
- Do not remove cables from the ports by pulling the cable itself. Always grasp and pull the connectors at the end of the cable.
- Ensure that all cables are fully inserted and firmly seated.

Connecting the VGA input


1. Connect the **VGA 1** jack on the display to the VGA output jack on a computer using a D-Sub (15-pin) cable.
2. Connect the computer's audio output jack to the **AUDIO** jack on the display using a suitable audio cable.
3. To view images from this input, press the **INPUT** button and press the **VGA** button on the remote control.

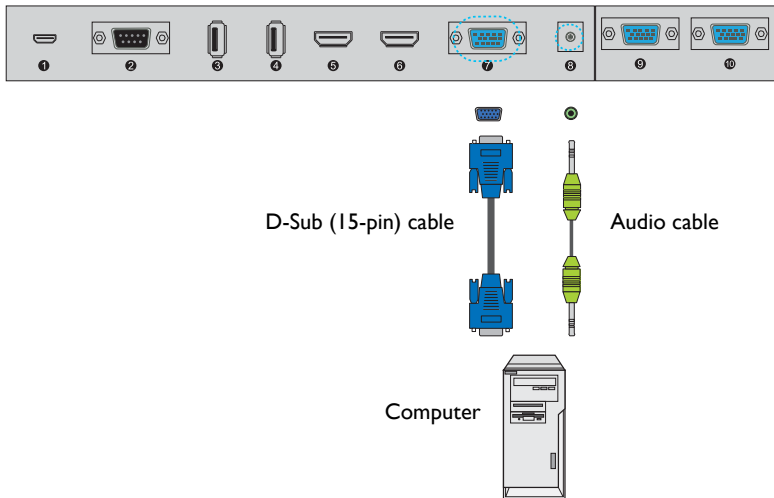

The audio cable is not supplied and should be purchased separately.

Connecting the digital inputs


1. Connect the HDMI output jack of a computer or A/V device (such as a VCR or DVD player) to the **HDMI 1** input jack on the display using an HDMI cable.
2. To view video image from this input, press the **INPUT** button and press the **HDMI** button on the remote control.

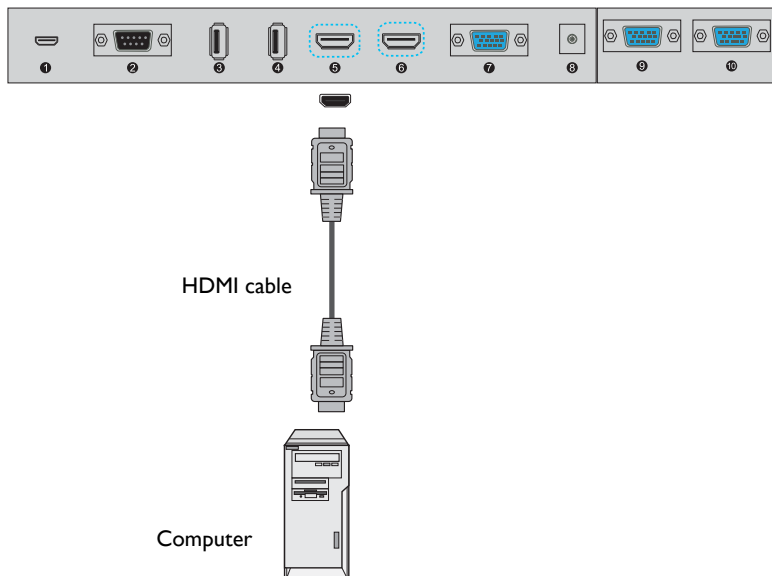

The cables are not supplied and should be purchased separately.

Connecting the YPbPr component video input


1. Connect the **YPbPr 1** jacks on the display to the component output jacks on an A/V device (such as a VCR or DVD player) using a component video cable.
2. Connect the DVD player's audio output jacks to the **L R** jacks on the display using a suitable audio cable.
3. To view video image from this input, press the **INPUT** button and press the **YPbPr** button on the remote control.

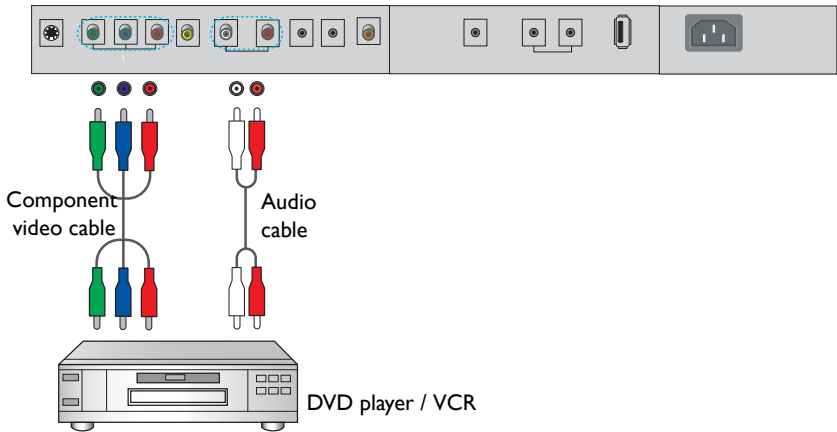

The cables are not supplied and should be purchased separately.

Connecting the AV and S-Video inputs

1. Connect the **S-VIDEO** or **AV 1** jack on the display to the output jack on an A/V device (such as a VCR) using an appropriate video cable.
2. Connect the VCR's audio output jacks to the **AV 1** jacks on the display using a suitable audio cable.
3. To view video image from this input, press the **INPUT** button and press the **AV** button on the remote control for the AV signal, or press the **INPUT** button repeatedly for the S-Video signal.

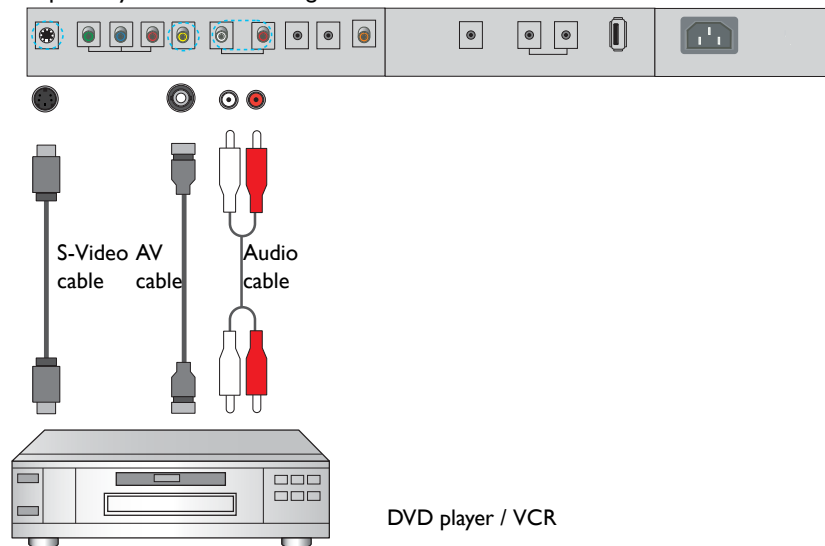


The cables are not supplied and should be purchased separately.

Connecting the multimedia inputs

To view multimedia files on the USB flash drive:


1. Plug the USB flash drive in the **M USB** port.
2. Press **INPUT** and **MULTI-MEDIA** on the remote control or select **Media** to access the multimedia OSD system. See the [Multimedia OSD operation on page 35](#) for details.

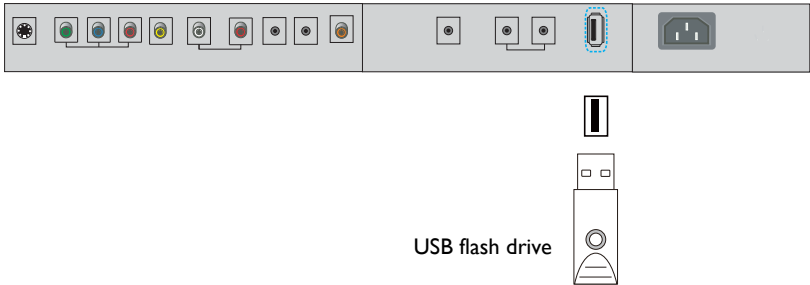

The cables are not supplied and should be purchased separately.

Connecting the touch module


Connect the USB TYPE A FOR TOUCH (type A) jack (TOUCH 1, TOUCH 2, or TOUCH 3) on the display to the USB port of a computer using the supplied USB cable. The touch module of the display supports easy Plug-and-Play operation. There is no need to install additional drivers on the computer.

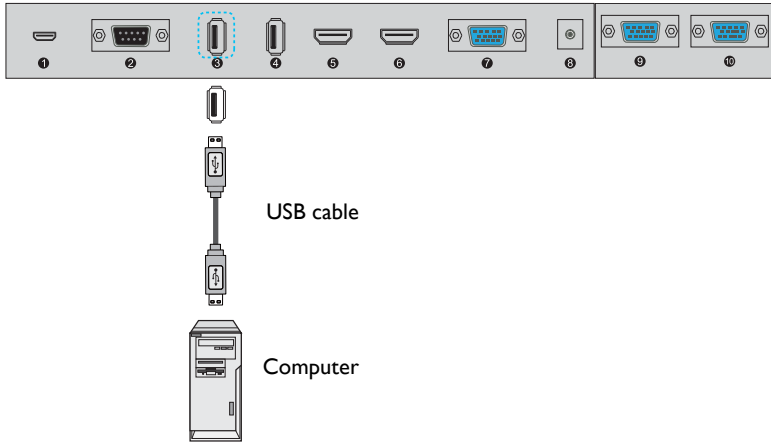

- Avoid blocking the touch screen frame (where sensors are located) when initiating the touch module.
 - It is highly recommended that you connect the display to the PC or laptop directly. Avoid connecting the display to a face plate device which may cause failures in touch operations.
 - If any ghost image occurs, please try to un-plug and then re-plug all USB cables. If the failure image still exists, use another USB type A to A cable.
 - TOUCH 1 must be used with HDMI 1 or VGA 1, TOUCH 2 must be used with HDMI 2 or VGA 2, and TOUCH 3 must be used with HDMI 3 or VGA 3.
-

Connecting power

Plug one end of the power cord into the **Power** jack on the display and the other end into an appropriate power outlet (if the outlet is switched, turn on the switch).




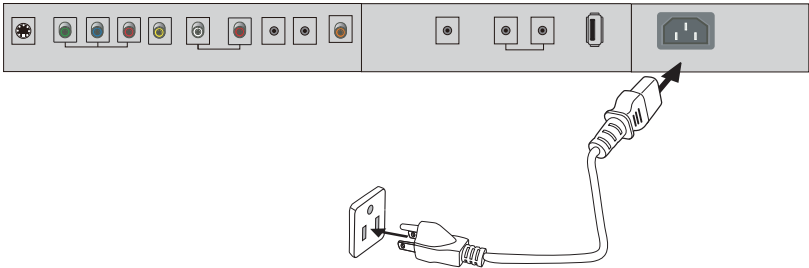






- The supplied power cord is suitable for use with 110-240V AC power only.
- The power cord and outlet illustrated may differ from the ones used in your region.
- Only use an appropriate power cord for your region. Never use a power cord which appears damaged or frayed, or change the plug type on the power cord.
- Be aware of the power loading when you use extension cords or multiple outlet power boards.
- There are no user serviceable parts in this display. Never unscrew or remove any covers. There are dangerous voltages inside the display. Turn off the power and unplug the power cord if you intend to move the display.




Using the touch screen



You can use the optical touch screen to control your operating system. The touch screen can emulate basic mouse functions and supports multi-touch functions for Windows 7/ 8*. The following table shows a list of gestures you can use on the touch screen.





- 
- Ensure that you have installed the USB cable on the display to a computer.
 - *Multi-touch functions are only supported by Windows 8, Windows 7 - Home Premium, Professional, Enterprise and Ultimate versions. For Windows XP, Windows Vista and Windows 7 - Starter and Home Basic versions, multi-touch is not supported.
 - Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

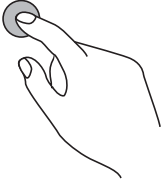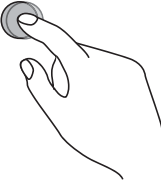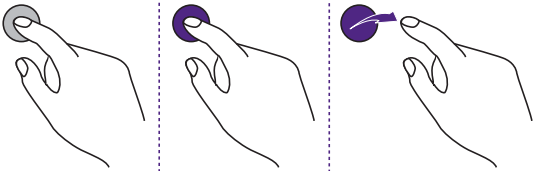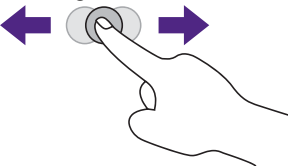OS functions	Gesture actions
For Windows XP, Windows Vista and Windows 7	
Click	Tap the screen once. 
Double-click	Tap the screen twice. 
Right-click	1. Press on the target. 2. Hold and wait for a blue ring to appear. 3. Release your finger. 
Drag	Drag one finger left or right. 

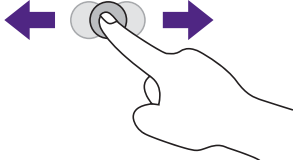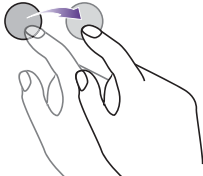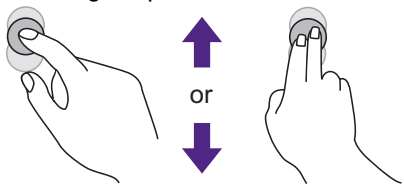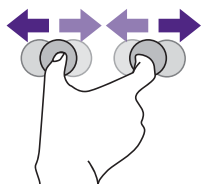OS functions	Gesture actions
For Windows Vista and Windows 7	
Selection	Drag one finger left or right. 
Pan up / Pan down / Back / Forward	Quickly drag your finger (Flick) in a desired direction. 
Multi-touch functions	
For Windows 7 - Home Premium, Professional, Enterprise and Ultimate versions	
Right-click	1. Press on the target. 2. Tap the screen with another finger. 3. Release the second finger. 
Scrolling	Drag one or two fingers up or down. 
Zoom	Move two fingers apart or toward each other. 

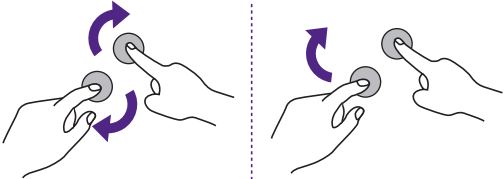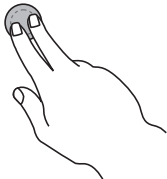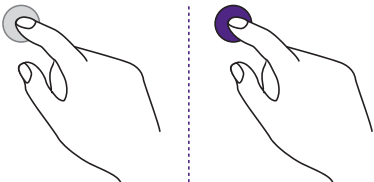OS functions	Gesture actions
Supported by specific applications	• Move two fingers in opposing directions. • Use one finger to pivot around another. 
Supported by specific applications	Tap two fingers simultaneously. The target should be the midpoint between the fingers. 
For Windows XP, Windows Vista and Windows 7	
Wakeup from Windows sleep mode (S3)	Press and hold for 4 seconds. 

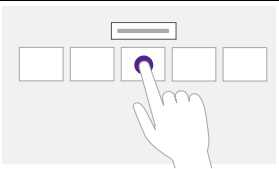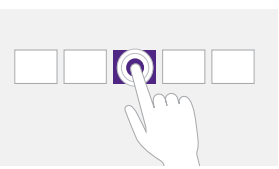
Gesture	Description
For Windows 8	
	Press and hold to learn This touch interaction causes detailed information or teaching visuals (for example, a tooltip or context menu) to be displayed without a commitment to an action. Anything displayed this way should not prevent users from panning if they begin sliding their finger.
	Tap for primary action Tapping on an element invokes its primary action, for instance launching an application or executing a command.

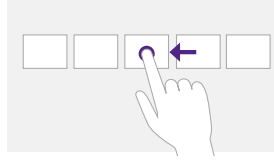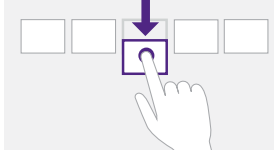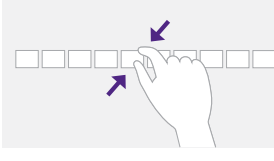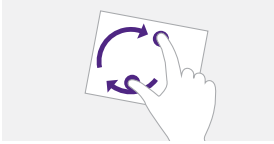Gesture	Description
 A diagram showing a hand with one finger touching a row of five square buttons. A purple arrow points left from the third button, indicating a sliding motion.	Slide to pan Slide is primarily used for panning interactions but can also be used for moving, drawing or writing. Slide can also be used to target small, densely packed elements by scrubbing (sliding the finger over related objects such as radio buttons).
 A diagram showing a hand with one finger touching a row of five square buttons. A purple arrow points down from the third button, indicating a downward swipe.	Swipe to select, command, and move Sliding the finger a short distance, perpendicular to the panning direction, selects objects in a list or grid (ListView and GridLayout controls). Display the AppBar with relevant commands when objects are selected.
 A diagram showing a hand with two fingers touching a row of ten square buttons. Two purple arrows point outwards from the fingers, indicating a stretching or pinching motion.	Pinch and stretch to zoom While the pinch and stretch gestures are commonly used for resizing, they also enable jumping to the beginning, end, or anywhere within content with Semantic Zoom. A SemanticZoom control provides a zoomed out view for showing groups of items and quick ways to dive back into them.
 A diagram showing a hand with two fingers touching a rectangular card. Two purple curved arrows indicate a circular motion around the card, representing a rotation.	Turn to rotate Rotating with two or more fingers causes an object to rotate.

Important instructions for using the touch screen

Please clean the frame when there is sign of malfunction on the touch screen.


- Before you clean the screen, make sure the display is turned off, and unplug the power cord.
- Remove dust or dirt from the screen and the infrared plastic filter periodically. It is suggested using a small amount of alcohol to clean the infrared plastic filter.
- To avoid damage to the screen, never use any type of abrasive materials to wipe the screen.
- Use a neutral detergent to clean the touch screen. Avoid using detergents with erosive substance, such as banana oil or ammonia.
- Moisten a clean soft, lint-free cloth with a neutral detergent and then clean the touch screen.
- Do not spray a detergent on the screen surface or the body directly. It may result in a short circuit to the touch screen.
- Keep the touch screen out of direct sunlight or spotlights.

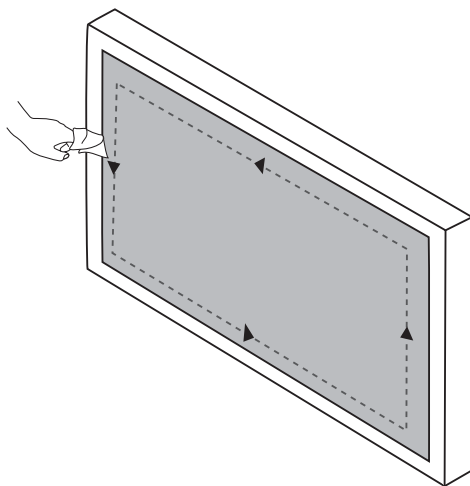

Basic operations

Turning the display on or off


Only by switching on master switch will either power button work. To turn on or off the display, press the power button on the display's control panel or on the remote control.

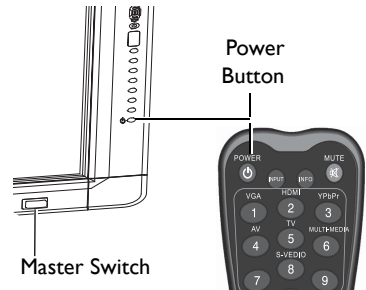

- The display's standby mode still consumes power. To completely cut off power supply, set the power switch to the off position or disconnect the power cord from the power outlet.
- The display follows the VESA approved DPM Power Management function. The power management function is an energy saving feature that automatically reduces the display's power consumption when the keyboard or the mouse has not been used for a fixed period.

Switching input signals

Press the **INPUT** button and those signal selection buttons on the remote control or the **INPUT** button on the control panel to select an input signal.

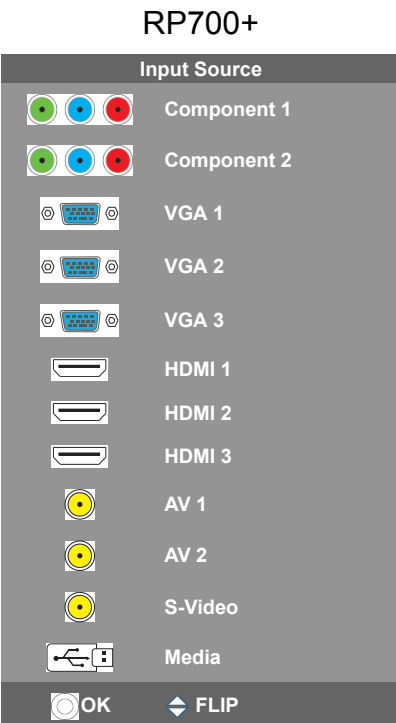

Adjusting audio volume level

Press ◀ / - or ▶ / + on the control panel or ◀ / **VOL-** / ▶ / **VOL+** on the remote control to adjust the volume.

The OSD (On-Screen Display) menu









OSD menu overview

Menu name	Options/functions	See page
Picture	• Picture Mode • Color Temperature • Aspect Ratio • Noise Reduction • Screen • Backlight • Auto Backlight	31
Sound	• Sound Mode • Balance • Auto Volume • Surround Sound • SPDIF Mode • Equalizer • Amplifier Control	32
Default	• OSD Language • Blending • Key Lock • Restore Factory Default • Temperature Control	33
Clock	• Clock • Off Time • On Time • Sleep Time • Auto Sleep • OSD Duration	34




Some options are only available when a certain input signal source is selected.

Operations in the OSD menu

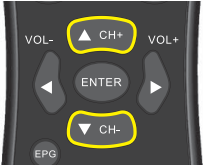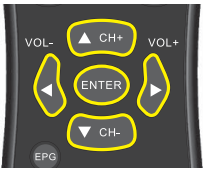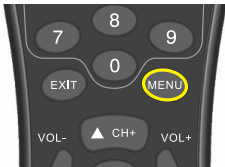
Using the control panel buttons	Using the remote control
1. Press MENU to open the OSD menu. 	1. Press MENU to open the OSD menu. 
2. In the OSD menu, press ▲ or ▼ to select an item. 	2. Press ▲ or ▼ to select an item. 
3. Press INPUT/ENTER to confirm selections. 	3. Press ENTER to confirm selections. 
4. Press ▲ or ▼ to select a feature and press ◀ or ▶ to adjust settings. Press INPUT/ENTER to save changes. 	4. Press ▲ and ▼ to select a feature and press ◀ or ▶ to adjust settings. Press ENTER to confirm changes. 
5. Press MENU to close the OSD menu. 	5. Press MENU to close the OSD menu. 

Picture menu

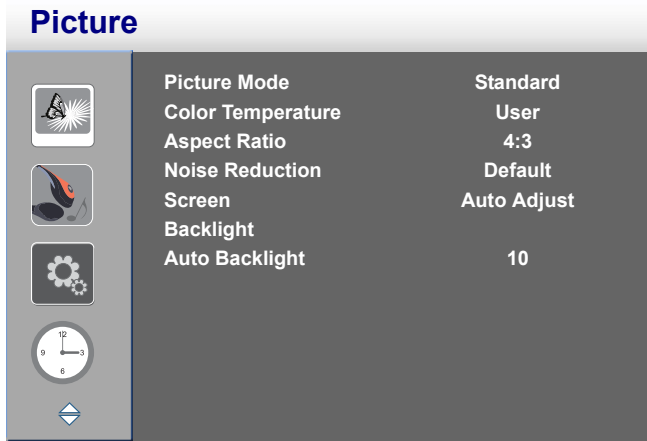


Name	Description
Picture Mode	Sets the display mode. Available modes are Standard , Mild , User , Classroom , and Dynamic . Properties such as Contrast , Brightness , Color , Sharpness , and Tint can be adjusted if the mode is set to User .
Color Temperature	Adjusts the color temperature. Available color temperatures are Classroom , Warm , Medium , Cool , and User . Properties such as Red , Green , and Blue can be adjusted further if color temperature is set to User .
Aspect Ratio	Sets the picture's aspect ratio. Available aspect ratios are Auto , 4:3 , 16:9 , Zoom1 , Zoom2 , Overscan , Panorama , PointToPoint . Aspect ratios supported by each input: • HDMI: Auto, 4:3, 16:9, Zoom1, Zoom2, Overscan, Panorama, PointToPoint. • VGA: 4:3, 16:9, PointToPoint. • M-USB: Auto, 4:3, 16:9. • AV, Component, and S-Video: Auto, 4:3, 16:9, Zoom1, Zoom2, Panorama.
Noise Reduction	Reduces electrical image noise caused by different media players. Available modes are Off , Low , Middle , High , and Default .
Screen	Sets screen to Auto Adjust , or manually fine-tunes Horizontal Pos. , Vertical Pos. , Size , and Phase .
Backlight	Adjusts the backlight intensity for the screen.
Auto Backlight	Sets the backlight intensity to automatic mode with Off or On .

Sound menu

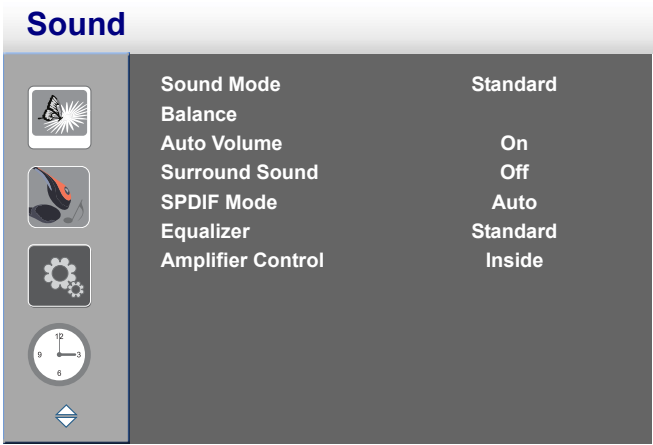


Name	Description
Sound Mode	Adjusts the sound output from the speakers. Available modes are Standard , Music , Movie , Sports , and User . Properties such as Treble and Bass can be adjusted i if the mode is set to User .
Balance	Adjusts the audio balance.
Auto Volume	Sets volume to automatic mode with Off or On .
Surround Sound	Sets the surround mode to Off , Surround , or SRS Trusurround XT .
SPDIF Mode	Sets SPDIF mode to PCM or Auto .
Equalizer	Sets equalizer mode to User , Standard , Music , Movie , or Sports . Properties such as 120 Hz , 500 Hz , 1.2 KHz , 7.5 KHz , and 12 KHz can be adjusted when mode is set to User .
Amplifier Control	Sets amplifier control mode to Inside or Outside .

Default menu

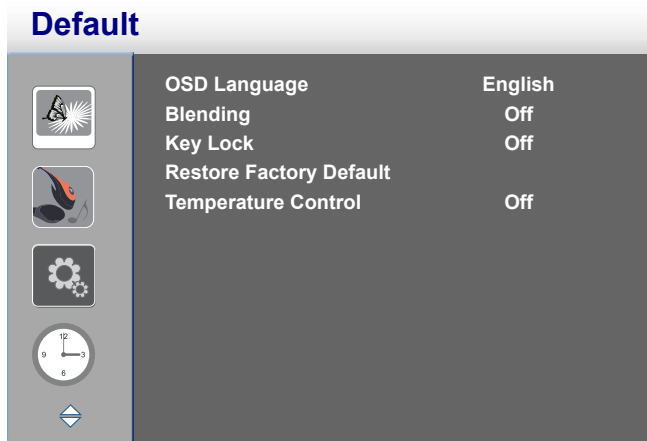

Name	Description
OSD Language	Sets your preferred language for the OSD menu.
Blending	Sets blending modes to Off , Low , Middle , or High .
Key Lock	Sets key lock status to Off or On .
Restore Factory Default	Returns all settings to factory default values with prompts of Yes or No .
Temperature Control	Sets temperature control mode to Off or On .

Clock menu

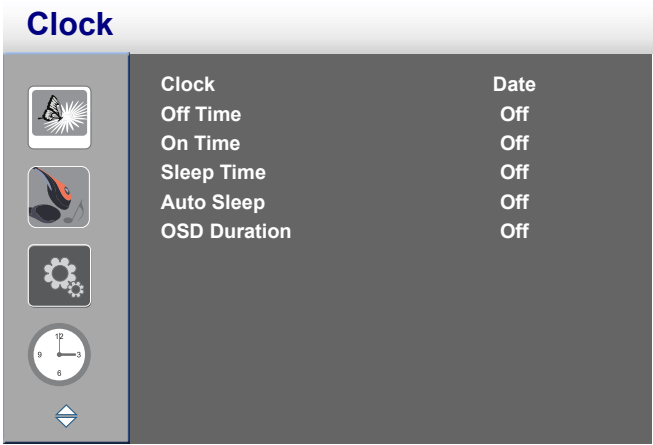


Name	Description
Clock	Sets the current date and time with items such as Date, Month, Year, Hour, Minute .  Set the current time before you set the On/Off Timer .
Off Time	Sets when to turn off the display. Available options are Off, Once, Everyday, Monday~Friday, Monday~Saturday, Saturday~Sunday, and Sunday . Properties such as Hour and Minute can be adjusted further.
On Time	Sets when to turn on the display. Available options are Off, Once, Everyday, Monday~Friday, Monday~Saturday, Saturday~Sunday, and Sunday . Properties such as Hour and Minute can be adjusted further.
Sleep Time	Sets time to hibernate the display from Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, and 240min .
Auto Sleep	Sets automatic hibernation to Off or On .
OSD Duration	Sets time for OSD to last from Off, 5sec, 10sec, or 15sec .

Multimedia OSD operation

The multimedia OSD system provides a variety of settings when the display is connecting to USB drives.

To access the multimedia OSD system:

1. Make sure the USB drive is correctly connecting to the display. See [Connecting the multimedia inputs on page 19](#) for details.
2. Press **MULTI-MEDIA** on the remote control or select **Media** from the source selection bar to access the multimedia OSD system. The main page appears.

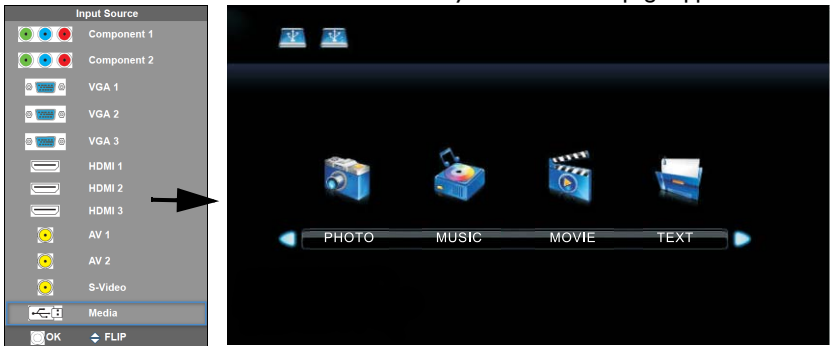

3. Select your desired menu to operate.

Multimedia buttons on the remote control

To operate the multimedia OSD system, use the buttons on the remote control.




No	Name	Description
1	MENU	Switches to the OSD menu.
2	EXIT	Goes back to root page of disk selection.
3	ENTER	Selects/deselects an item.
4	◀ / ▶ / ▲ / ▼	Directional arrows for selecting a desired item.
5	REV	Fast rewinds the current selected item.
6	▶ / II	Starts/resumes/pauses playback.
7	■	Stops image playback.
8	FWD	Fast forwards the current selected item.
9	PREV	Goes back to the previous selected item.
10	NEXT	Goes to the next selected item.

Viewing files

To view the files on your USB flash drive, simply plug your USB flash drive to the **M USB** jack on the display and select from **PHOTO**, **MOVIE**, **MUSIC**, and **TEXT**.

PHOTO:

Lists all the supported image files in thumbnail view. Select the image you want to display and perform the functions as provided on the screen according to your needs.

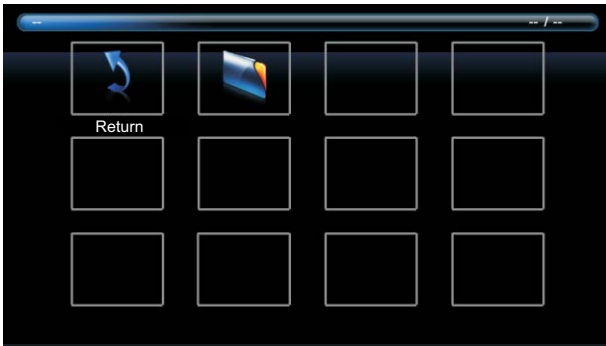


Remote control key functions		
No	Name	Description
1	MENU	Switches to the OSD menu.
2	EXIT	Goes back to root page of disk selection.
3	ENTER	Selects/deselects a desired image.
4	◀ / ▶ / ▲ / ▼	Directional arrows for selecting a desired image.
5	REV	
6	▶/	Starts/resumes/pauses playback.
7	■	Stops image playback.
8	FWD	
9	PREV	Goes back to the previous selected image.
10	NEXT	Goes to the next selected image.

- 
- Instead of press **INFO** button on the remote control, metadata of the selection on the cursor will be revealed around 3 seconds later.
 - Use ◀ / ▶ / ▲ / ▼ and **ENTER** to select multiple files as a playlist.
 - Use ◀ / ▶ for previous/next image in the playback.
 - Supported image format: jpg/jpeg/bmp/png.

MUSIC:

Select the track you want to play and perform the functions as provided on the screen according to your needs.

Remote control key functions		
No	Name	Description
1	MENU	Switches to the OSD menu.
2	EXIT	Goes back to root page of disk selection.
3	ENTER	Selects/deselects a desired track.
4	◀ / ▶ / ▲ / ▼	Directional arrows for selecting a desired track.
5	REV	Fast rewinds the current selected track.
6	▶/II	Starts/resumes/pauses playback.
7	■	Stops playback.
8	FWD	Fast forwards the current selected track.
9	PREV	Goes back to the previous selected track.
10	NEXT	Goes to the next selected track.
 • Instead of press INFO button on the remote control, metadata of the selection on the cursor will be revealed around 3 seconds later. • Use ◀ / ▶ / ▲ / ▼ and ENTER to select multiple files as a playlist. • Supported audio format: mp3/wma/AAC.		

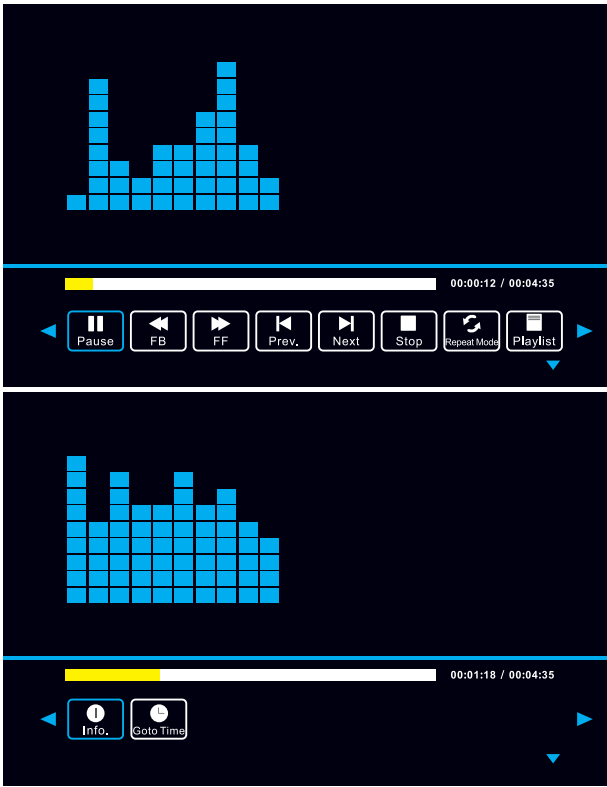

Legend of icons	
Icon	Description
	Pauses/resumes playback.
	Fast rewinds/fast forwards playback.
	Goes back/go to the previous/next track in the playlist.
	Stops playback/selects repeat mode as single repeat or all repeat.
	Checks the items in the playlist.
	Displays metadata of the current track.
	Directly goes to certain playback time and plays.

MOVIE:

Select the video file you want to play and perform the functions as provided on the screen according to your needs.

Remote control key functions		
No	Name	Description
1	MENU	Switches to the OSD menu.
2	EXIT	Goes back to root page of disk selection.
3	ENTER	Selects/deselects a desired video.
4	◀ / ▶ / ▲ / ▼	Directional arrows for selecting a desired video.
5	REV	Fast rewinds the current selected video.
6	▶/II	Starts/resumes/pauses playback.
7	■	Stops playback.
8	FWD	Fast forwards the current selected video.
9	PREV	Goes back to the previous selected video.
10	NEXT	Goes to the next selected video.



- Instead of press **INFO** button on the remote control, metadata of the selection on the cursor will be revealed around 3 seconds later.
- Use **◀ / ▶ / ▲ / ▼** and **ENTER** to select multiple files as a playlist.
- Press **PREV/NEXT** multiple times for multiple rewind/forward speed.
- Supported video format: avi/mkv/ts/dat/vob/mpg/mpeg/mov/mp4/rm/rmvb. Some subtitle files (.srt) may be displayed incorrectly due to encoding formats.

TEXT:

Supports text files. Select the text file you want to display and perform the functions as provided on the screen according to your needs.

Remote control key functions		
No	Name	Description
1	MENU	Switches to the OSD menu.
2	EXIT	Goes back to root page of disk selection.
3	ENTER	Opens the selected file.
4	◀ / ▶ / ▲ / ▼	Directional arrows for selecting a desired text file
5	REV	Page up.
6	▶/II	Starts/resumes/pauses playback.
7	■	Stops playback.
8	FWD	Page down.
9	PREV	Goes back to the previous selected text file.
10	NEXT	Goes to the next selected text file.



- Instead of press **INFO** button on the remote control, metadata of the selection on the cursor will be revealed around 3 seconds later.
- Use ◀ / ▶ / ▲ / ▼ and **ENTER** to select multiple files as a playlist.
- Supported text file encoding format: UTF-8.

Product information

Specifications


Item		Specifications
		RP700+
LCD panel	Backlight	E-LED
	Panel size	70"
	Pixel pitch (mm)	0.802
	Native resolution (pixels)	1920 x 1080
	Brightness (cd/m ²) (typical)	350
	Contrast (typical)	4000:1
	Response time (ms) (typical)	6
	Panel Bit	10-bit
Touch	Technology	IR Touch
	Resolution	32767 x 32767
	Capacity	6 points
	Accuracy	+/- 2mm
	Touch Output	USB x 3
	Operating System	Windows XP/Vista/7/8, Mac OSX 10.6~10.9 Linux, Chrome OS
Panel glass	Tempered glass	AG coating, 80
	Thickness	4mm
Input	Computer	VGA (D-Sub 15-pin)
	Video	Composite Video (RCA jacks), S-Video, YPbPr (RCA jacks), HDMI
	Audio	L/R (RCA jacks), Line-in (3.5 mm jack), Mic-in (3.5 mm Jack)
	USB	Type A; Mini B
	Control	RS-232C (D-Sub 9-pin),
	TV Tuner	X
Output	Computer	VGA (D-Sub 15-pin)
	Video	Composite Video
	Audio	Line-out (3.5 mm jack)
	External speaker out (L/R)	O
Audio	Audio W (Amp)	15W x 2
	Internal speaker	O

Power	Supply	100 - 240V AC, 50/60 Hz
	Consumption Max.	300W
	Consumption Standby	< 1W
Environment	Operating Temperature	0 - 40°C, 32 - 104°F
	Operating Humidity	10 - 90% (without condensation)
	Storage Temperature	-25 - 55°C, -13 - 131°F
	Storage Humidity	10 - 95% (without condensation)
	Display Orientation	Landscape/Portrait
Mechanical	Weight (kg)	72
	Dimensions (W x H x D) (mm)	1645.1 x 971.8 x 123.5mm
	Bezel Dimension - T/B/ L/R (mm)	50/50/50/50
Feature	DVI daisy chain	X
	RS232 control daisy chain	X
	Image setting	O
	Picture mode	O
	Sharpness enhancement	O
	Proof of image retention	X
	Dimming control	O
	Blank	O
	Freeze	O
	10-bit color processing	O
	Built-in video wall support	X
	Scheduling	O
	Source / volume control	O
	HDMI-HDCP	O
	De-Interlacing / comb Filter	O
	Ambient light sensor	O



Specifications and functions are subject to change without notice.

Dimensions
RP700+

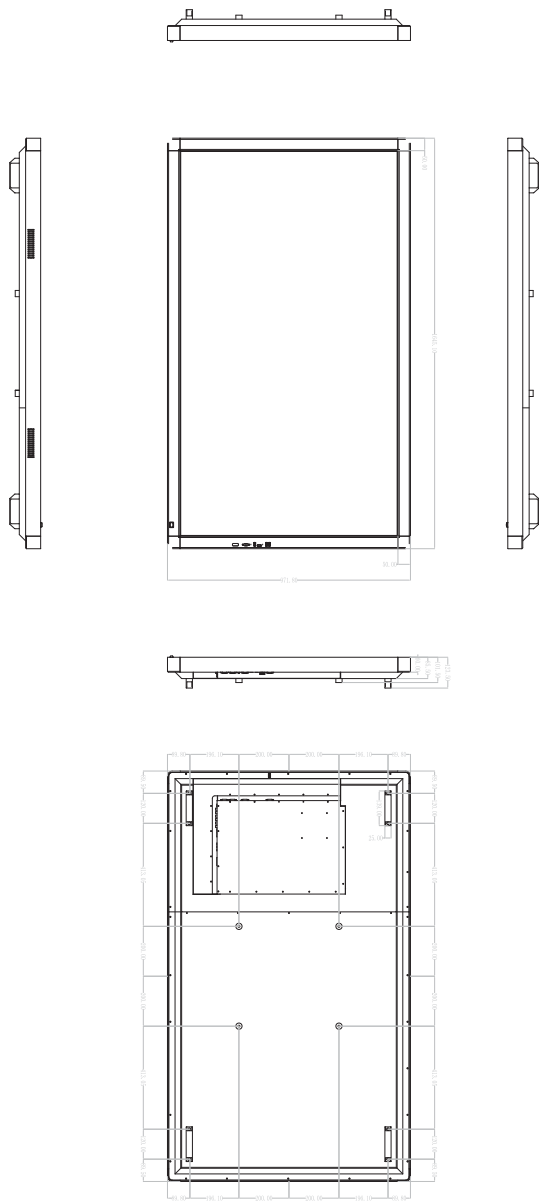

Unit: mm

Supported input signal resolution

Resolution	Input source				
	AV	S-Video	YPbPr	VGA	HDMI
640 x 480 @ 60Hz				○	
640 x 480 @ 67Hz					
640 x 480 @ 72Hz				○	
640 x 480 @ 75Hz				○	
720 x 400 @ 70Hz				○	
800 x 600 @ 60Hz				○	
800 x 600 @ 75Hz				○	
832 x 624 @ 75Hz				○	
1024 x 768 @ 60Hz				○	
1024 x 768 @ 75Hz				○	
1152 x 870 @ 75Hz				○	
1280 x 720 @ 60Hz				○	
1280 x 768 @ 60Hz				○	
1280 x 800 @ 60Hz RB					
1280 x 800 @ 60Hz				○	
1280 x 960 @ 60Hz				○	
1280 x 1024 @ 60Hz				○	
1360 x 768 @ 60Hz				○	
1366 x 768 @ 60Hz				○	
1400 x 1050 @ 60Hz				○	
1600 x 1200 @ 60Hz				○	
1680 x 1050 @ 60Hz RB				○	
1600 x 1050 @ 60Hz				○	
1920 x 1080 @ 60Hz				○	
NTSC-M	○	○			
NTSC-J	○	○			
PAL-BDGHI	○	○			
576i (50Hz)			○		○

480i (60Hz)			○		○
480p (60Hz)			○		○
576p (50Hz)			○		○
720p (25Hz)			○		
720p (30Hz)			○		
720p (50Hz)			○		○
720p (60Hz)			○		○
1080i (50Hz)			○	○	○
1080i (60Hz)			○	○	○
1080p (24Hz)			○		
1080p (25Hz)			○		
1080p (30Hz)			○		
1080p (24Psf)					
1080p (25Psf)					
1080p (50Hz)			○	○	
1080p (60Hz)			○	○	



- ○: supported
- Blank: not supported

Troubleshooting

Problem	Solution
No picture	Check the following: • Is the display turned on? Check the power indicator of the display. • Is the signal source device turned on? Turn on the device and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly. • Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 44 to select a supported resolution and try again. • Have you chosen an unsupported output resolution on the DVD or Blu-ray disc player? Refer to Supported input signal resolution on page 44 to select a supported resolution and try again.
No sound	Check the following: • Have you turned on the mute function on the display or the input source device? Turn off the mute function or increase the audio volume level and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly.
The computer input image looks strange	• Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 44 to select a supported resolution and try again. • Use the Auto Adjust function (See Picture menu on page 31) to let the display automatically optimize the display of computer image. • If the result of the Auto Adjust function is not satisfactory, use the Phase, Horizontal Pos. and Vertical Pos. functions to manually adjust the image.
The control panel buttons do not work	Have you locked the control panel buttons? Unlock the buttons and try again.

The remote control does not work	• Have you locked the remote control function? Unlock the function and try again. • Check for incorrect battery orientation. • Check for dead batteries. • Check your distance and angle from the display. • Check whether remote control is properly being pointed at the display's remote control sensor window. • Check for any obstacle between the remote control and the remote control sensor window. • Check that the remote control sensor window is not under strong fluorescent lighting, or in direct sunlight. • Check for any devices (computer or personal digital assistant, PDA) nearby that transmit infrared signals which may cause interference to signal transmission between the remote control and the display. Turn off the infrared function of these devices.
---	--